

210PB COMBO MENU

DRAWING NO	PART NO	DESCRIPTION	DRAWING NO	PART NO	DESCRIPTION
101	A-1AA	BASE BOARD	130	FD-38	BUSH
103	A-2A	COVER PLATE(LEFT)	131	I-10	IRON TUBE
104	A-3A	COVER PLATE(RIGHT)	132	NH-B1	ADJUSTMENT PLATE
105	B-1	DRAWER	133	NH-B2	SET-PIN GUIDER
106	B-2	PLASTIC HOLDER	134	NH-B2A	SET-PIN GUIDER
107	B-3	KNOB (LEFT)	135	NH-D3	STOP GUIDE AXLE
108	B-4A	KNOB (RIGHT)	136	NH-D4A	GUIDE PLATE
109	B-5	WEDGE	137	NH-D6A	BRACKET
110	B-9	RUBBER FOOT	138	NH-D8B	SET-PIN
111	BA-4A	HANDLE	139	NH-D10	BEARING BRACKET (LEFT)
112	CB-3	PAPER STOP SCREW	140	NH-D11	BEARING BRACKET (RIGHT)
113	CB-4	PAPER STOP GUIDE	141	NH-D15	RACK
114	CB-5	PAPER STOP NUT	145	NH-K1	KNIFE-SET
115	CD-25A	PAPER STOP RAIL COMPLET	147	NH-D19B	TRANSMISSION PLATE(RIGHT)
115-1	C-1	ALIGNMENT SCALE	148	NH-D19B-1	TRANSMISSION PLATE(LEFT)
116	D-1A	BACK COVER	149	NH-D35	ADJUSTMENT AXLE
117	D-2A	FRONT PLATE	150	NH-D35-1A	ADJUSTMENT PLATE
118	D-3	COVER PLATE	151	NH-D36A	ADJUSTMENT RACK
119	D-7	RAKE	152	TB-11	AXLE CAP
120	D-8	PLATE	153	TC-8	CARRIER
121	D-19T	SWING PLATE	154	TC-16A	SLIDE
122	D-20-1	SPACER	155	3LM-B4-1	GEAR
123	D-20-2	WASHER	157	C-2	MARK
124	D-21A	HINGE COMPLET (RIGHT)	158		SCREW
126	D-22AA	AXLE	159	I-10	IRON TUBE
127	D-35A	SPRING			
128	FD-13	TOOTH SEGMENT			
129	FD-32	W TYPE SPRING			

