

**TCC-EASY 2 LAMINATOR PARTS MANUAL**

<b>DRAWING NO.</b>	<b>PART NO.</b>	<b>DESCRIPTION</b>	<b>DRAWING NO.</b>	<b>PART NO.</b>	<b>DESCRIPTION</b>	<b>DRAWING NO.</b>	<b>PART NO.</b>	<b>DESCRIPTION</b>
001	RLM-1E-R	BRACKET (R)	032	RLM-61E	HEATER	063	RLM-68	SLEEVE
002	RLM-1E-L	BRACKET (L)	033	RLM-62E	TRANSFORMER	064	RLM-69	KNIFE ROUND
003	RLM-2E	PULL ROLLER	034	RLM-63E	PU	065	RLM-70	KNIFE PAD
004	RLM-3E	FEED TRAY	035	RLM-64E	POWER SWITCH	066	SB-4	FOOT PAD
005	RLM-4E	FIXING PLATE	036	RLM-65E	KNOB	067	3H1-P9	SILICON PAD
006	RLM-5E	MOTOR (DC)	037	RLM-66E	KEY SWITCH	068	RLM-64S	IDLER GEAR RACK
007	RLM-6E	PRESS PLATE TOP	038	RLM-67E	BACK FILM GUIDE	069	RLM-P74-S	SLEEVE
008	RLM-6E-1	PRESS PLATE BOTTOM	039	RLM-68E	IR PCB	070	MN3-1006D10A	LIMIT SWITCH
009	RLM-6E-2	PRESS PLATE	040	RLM-69E	IR SENSOR HOUSING	071	RLM-82E	HEAT SINK
010	RLM-7E	POWER BRACKET	041	RLM-70E	IR SENSOR HOUSING LID	072	D899-A	WARNING LABEL A
011	RLM-9E	GUIDE PLATE	042	RLM-71E	COUNTER COLLAR	073	D899-B	WARNING LABEL B
012	RLM-10E	FEEDING PLATE (L)	043	RLM-72E	COUNTER RACK	074	D899-C	WARNING LABEL C
013	RLM-12E	FEEDING PLATE (R)	044	RLM-73E	SAFETY SHIELD RACK	075	D899-D	WARNING LABEL D
014	RLM-14E	TOP ROD	045	RLM-74E	COUNT PCB	076	BT-03	INSULATING PARTICLES
015	RLM-14E-1	BOTTOM ROD	046	RLM-75E	THRUST BEARING WASHER	077	ST-03P	INSULATING PAD
016	RLM-18E	REAR PLATE	048	RLM-77E	SHOULDER BOLT	078	RLM-83E	TRIAC
017	RLM-19E	INNER COVER	049	RLM-78E	NO FUSE BREAKER	079	3H1-P11	BAKELITE SHEET
018	RLM-22E-1	SIDE COVER (L)	050	RLM-79E	SPROCKET 22T	080	D836-TCC-EZ2	VOLTAGE LABEL
019	RLM-22E	SIDE COVER (R)	051	RLM-80E	SPROCKET 14T	081		MACHINE NUMBER
020	RLM-23E	KNOB FOR SHAFT HOLDER R	052	RLM-81E	SPROCKET 10T	082	D835	GROUNDING LABEL
021	RLM-23E-1	STAR KNOB	053	RLM-2A	FRONT ROLLER	083	RLM-84E	WIRE JACKET
023	RLM-27E	CONTROL PANEL	054	RLM-15A	EXPAND SHAFT Ø5	084	EP-31	POWER CORD
024	RLM-27E-1	PCB	055	RLM-16-1	FIXED SHAFT (BK)	085	D2A7	TOROIDS CORE
025	RLM-27E-2	CONTROL PANEL PCB	056	RLM-21	FIXING PLATE	086	RLM-85E	WIRE (COUNT TO PCB)
026	RLM-28E	BUTTON NAMEPLATE	058	RLM-25	CU BUSH	087	RLM-86E	WIRE (CONTROL PANEL PCB TO PCB)
027	RLM-33E	SIDE GUIDE		RLM-25-1	BUSH	088	RLM-87E	CUT-OFF FUSE
028	RLM-34E	GUIDE SCREW	059	RLM-42	SPRING	089	D266-N	WIRE (UPPER & LOWER HEATER)
029	RLM-45E	CHAIN	060	RLM-37-NA	KNIFE RACK	090	D266-O-1	WIRE (HEATER TO PCB)
030	RLM-59E	SHIELD	061	RLM-66	NUT	091	RLM-88E	WIRE (LIMIT L TO PCB)
031	RLM-60E	END CAP	062	RLM-67	WASHER PLASTIC	092	RLM-89E	WIRE (LIMIT R TO PCB)